



Acer Aspire 5334-2581 RAM Replacement

The Acer Aspire 5334 RAM is an easy component to remove.

Written By: gilson teixeira



INTRODUCTION


This guide is simple and it will show how to replace RAM on your Acer Aspire 5334-2581. RAM usually helps boost the computer speed and functionality.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Battery

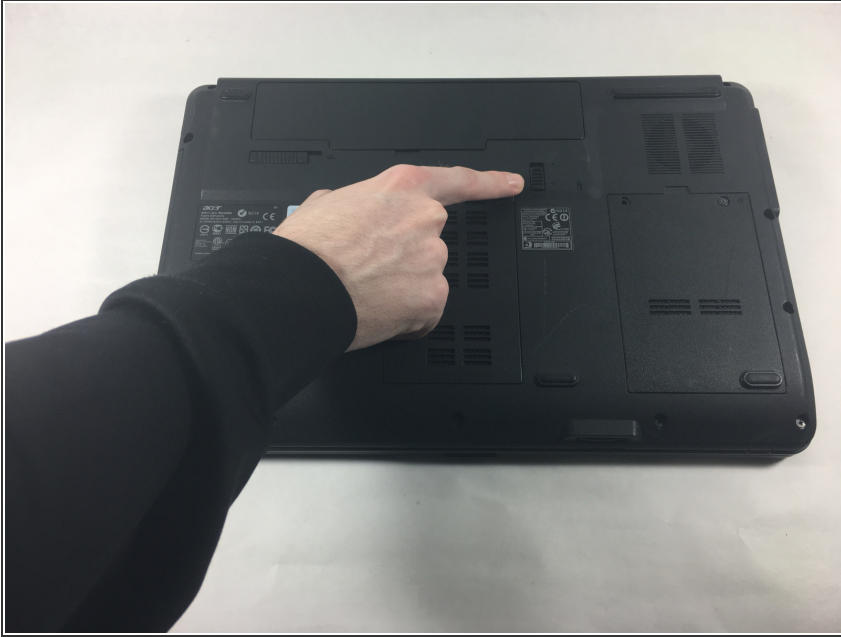


- Please make sure your device is unplugged . Turn it over slowly, and place it on a flat surface.

Step 2




- This latch holds your battery in place, it should always be locked. Make sure to unlock this piece.
- ⚠ Do not break this latch, otherwise your battery will not hold in place.

Step 3

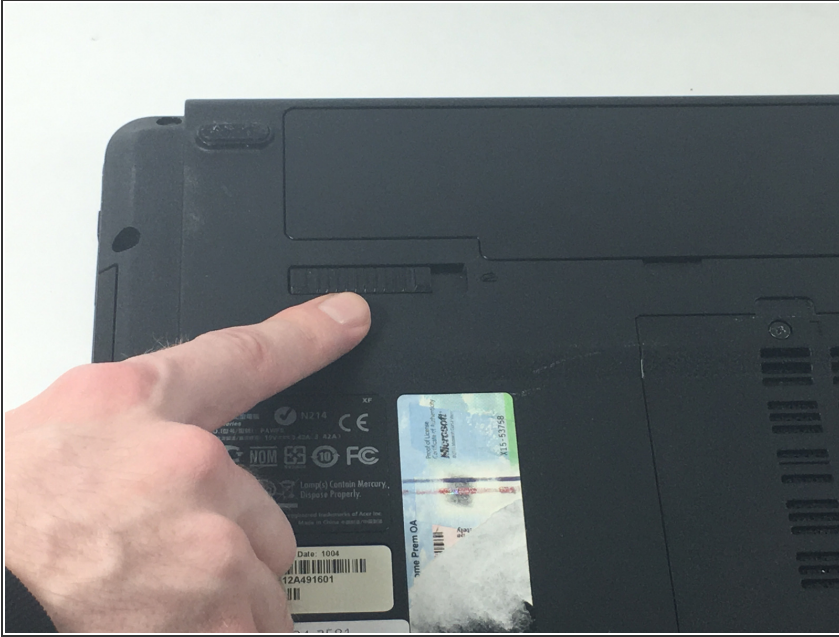

- Locate the eject latch and push it so the battery can come out.
- The battery will lift up once you have pushed the latch.
- ☑ You DO NOT need to adjust the latch when replacing the new battery, because it just snaps in place.

Step 4

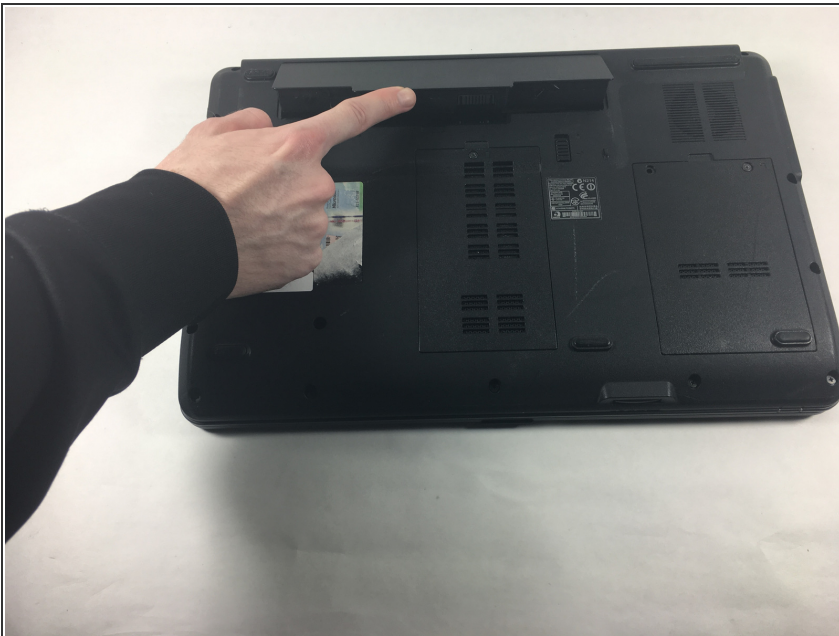

- Lift the battery up, and it should just come right off. You should see the label with the part number.

Step 5 — RAM



- Remove the phillips screw
- then take away the cover

Step 6



- Push the marked claws to the side in order to make the RAM free.
 - To remove the RAM just pull it in the shown direction.
- ⚠ Take extra care when removing the RAM, you do not want to damage the placeholder for the RAM.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 10:08:28 AM.